


Assembly Instruction

Item No.:4636

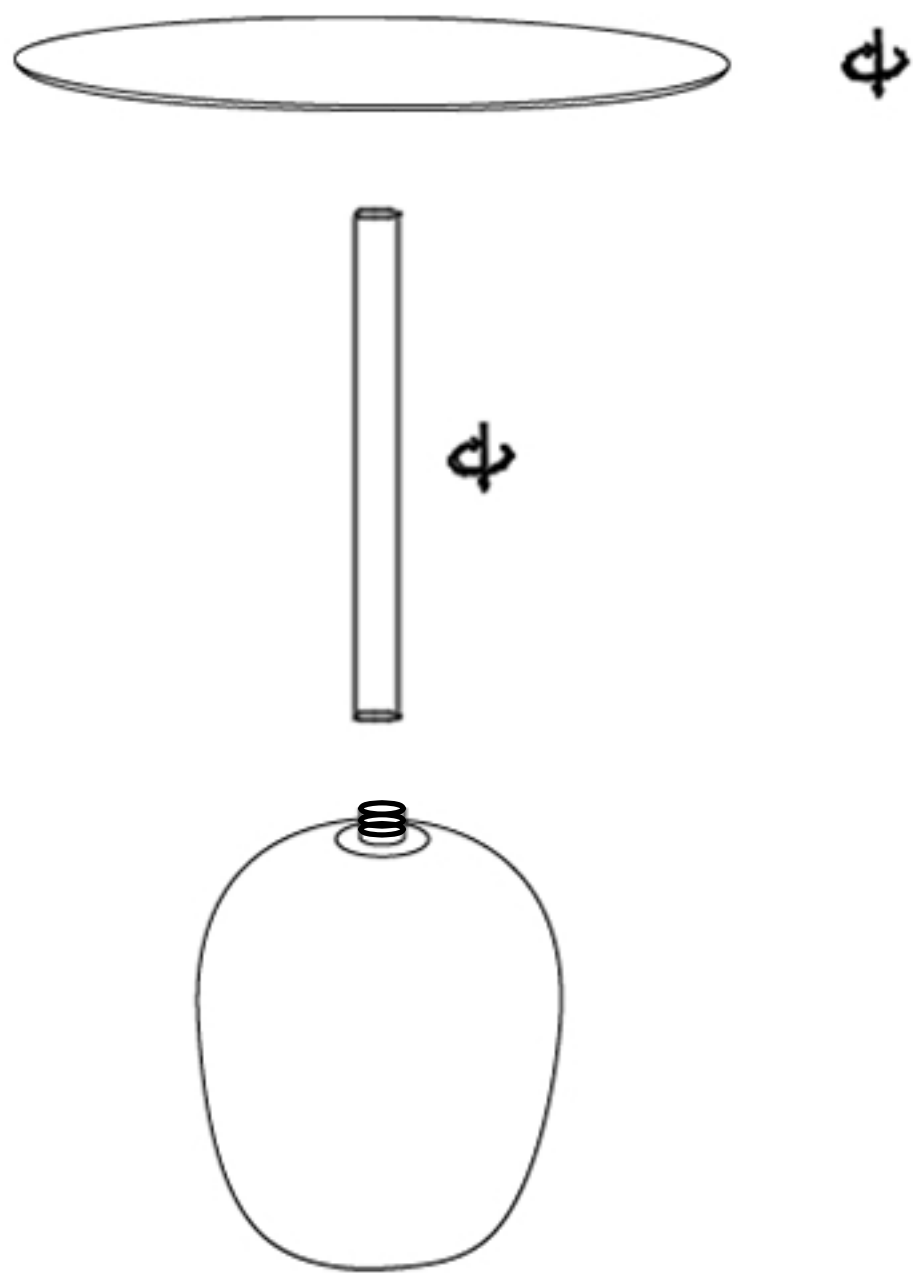

The table should not be installed in an inclined position,it must be kept flat



Please move the base instead of the top