



Assembly Instruction

Item No.:4605

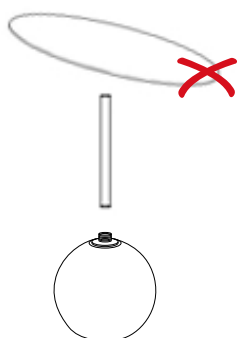

The table should not be installed in an inclined position, it must be kept flat

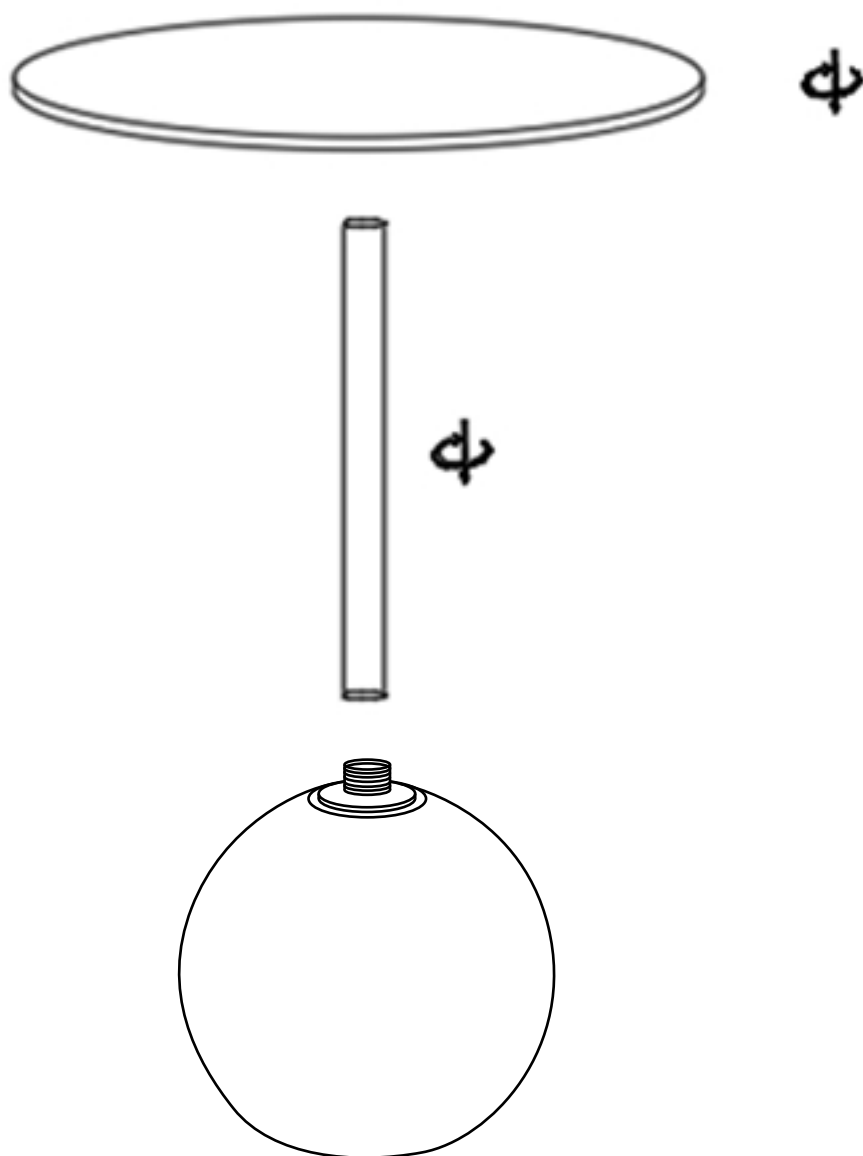

Please move the base instead of the top